



Digital Telephone

Quick Reference Card



Extension Name: \_\_\_\_\_

Extension Number: \_\_\_\_\_

Extension Pswd: \_\_\_\_\_

Copyright 2008, Inter-Tone Networks, LLC

Answering a Call

1. When an incoming call rings to your phone, pick up the handset or press the speaker button.
2. When you are through, place the handset back in the cradle or press the speaker button.

Placing an Outside Call

1. Pick up the handset or Press the speaker button
2. Dial 9 or Press an available CO Line button.
3. Dial the number and talk.
4. When you are through, place the handset back in the cradle or press the speaker button.

Placing an Intercom Call

1. Dial the extension number or Press the preprogrammed Intercom Button or Pick up the handset and dial the extension number of the person you wish to speak with.
2. When you are through, place the handset back in the cradle or press the speaker button.

Change from Handset to Speakerphone

1. While talking on the handset, press the Speaker button (The LED will light).
2. Place the handset on the cradle.

Change from Speakerphone to Handset

1. Pick up the handset. The speakerphone will be deactivated.

Placing a call on Hold

1. While speaking to an inside or outside party, press the hold button.
2. To retrieve the call, press the corresponding Line button, or press the hold button again.

Transferring a Call

1. While speaking to the calling party, press the Transfer button.
2. Press the programmed button or dial the extension number of the person that will receive the call.
3. When the party at the extension answers, or if the extension is in voice announce mode, you may announce the caller.
4. Hang up to complete the transfer


Direct Mailbox Transfer

1. While speaking to the calling party, press the preprogrammed voice mail button.
2. Press the preprogrammed button or dial the extension number
3. Hang up to complete the transfer

Paging

1. Press Feature and dial **5 0**
2. Select **[all]** for everyone, **[extern]** for external only, **[both]** for internal and external, or group for a specific group **1 - 6**
3. Make announcement
4. Hang up

### Call Voice Mail

The display will show how many new and saved messages you have. For example, when you have 1 new and 1 saved message the following will be displayed. 

Press the preprogrammed voice mail button.








Enter Default Password: \_\_\_\_\_

Enter a New Password: \_\_\_\_\_












The voicemail will announce how many messages are in the mailbox.

 - Press 1 to listen to messages


After listening to a message:

-  - Replay
-  - Save
-  - Delete
-  - Reply
-  - Envelope Information
-  - Copy
-  - Skip

### Mailbox Menu Options

-  - Listen to messages
-  - Send a Message
-  - Change Password
-  - Record Greeting
-  - Record Name
-  - Pager Notification
-  - Cellular Telephone
-  - Assistant Extension
-  - Direct Message Delivery
-  - Transfer
-  - Clipboard Recordings


### Personal Speed Dial Bin Locations

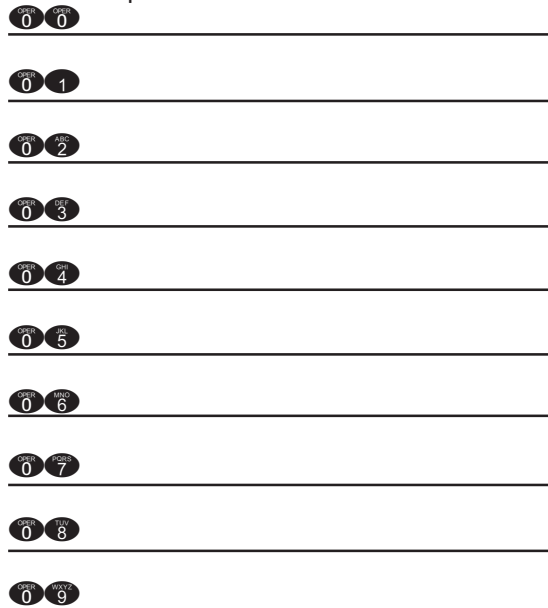

### Conferencing

1. While on a telephone call, press hold
2. Make the next call:
  - a. Press a line button and dial the telephone number.
  - b. Dial an extension number
3. Press the Conf. button to establish the conference.
4. Repeat steps 2 and 3 for up to three additional parties.

### Navigation Keys

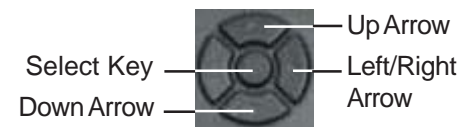

The following features can be found on the Navigation keys:

### Call Log

Stores up to 50 inbound and 50 outbound telephone numbers. Scroll through, to find the desired number, Press the select key to dial.

### Speed Dialing

Stores up to 80 System speed dial bins. Press the down arrow to start at the beginning of the list. Press the select key to dial.

### Feature Codes

Review feature codes and directory numbers

### Extension Directory Numbers

Scroll through a list of directory numbers

### Paging

Press the down arrow to select a group, or press the up arrow to select all page.

### Background Music

Digital telephones may monitor background music. Use the select key to enable/disable.

For Sales or Support :  
Call 432 620 8663 or visit [www.inter-tone.com](http://www.inter-tone.com)